


For specialist staff only: Dismantling and disposal

At the end of its service life, the appliance must be disassembled and recycled.

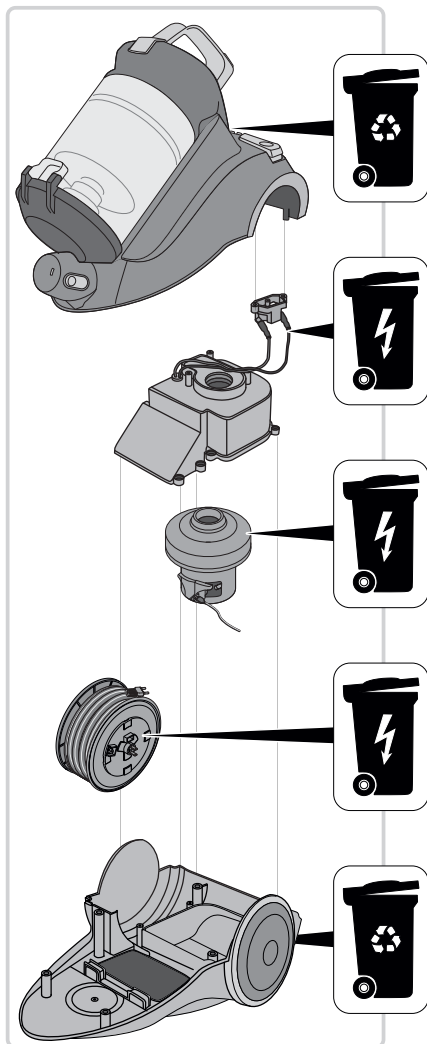

Loosen all screw connections and other connections until the appliance components can be disposed of separately as follows:

With the recyclable commercial refuse (see fig./♻️):

- Upper housing shell
- Lower housing shell
- Dust bin
- Hubcaps
- All small PVC parts
- Screws

With the recyclable electronic waste (see fig./⚡):

- Motor
- Cable drum
- Circuit board
- Wires

Service information **SEVERIN SERVICE**

Röhre 27 (Halle 10)
59846 Sundern
Telefon (02933) 982-460
service@severin.de

according to EU Directive No. 666/2013 (Appendix 1, Para. 2(b))